



### Removal

---

- 1 Remove paneling at rear on roof frame (68-447).
- 2 Secure back door by means of a support.

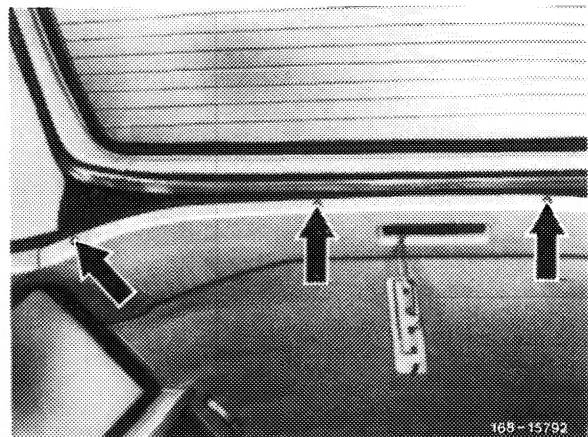


- 3 Pull out safety clip on rear fastening of gas pressure spring and push out bolt in outward direction.

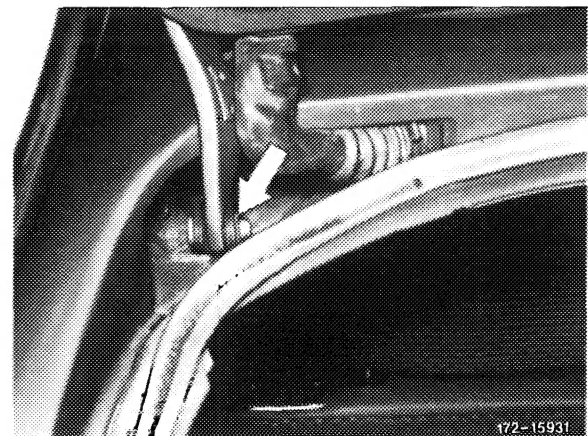

- 4 Unscrew front fastening screw (hex. socket) through assembly hole in head lining.

**Note:** If the hex. socket screw is concealed in range of assembly hole, remove head lining at rear on roof frame.

- 5 Pull out gas pressure spring inside past hinge of back door towards the rear.

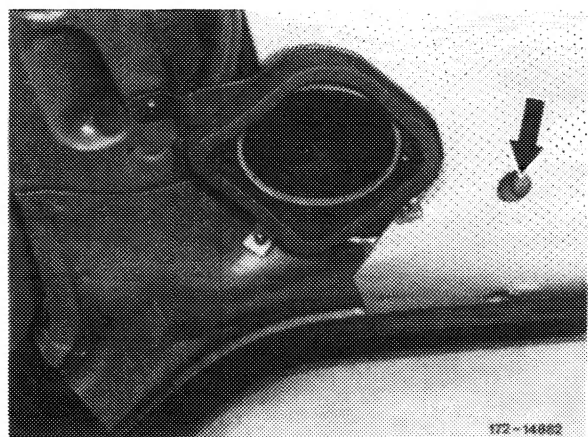

## Installation

---

- 6 Install gas pressure spring from the rear and screw to roof frame at 25 Nm (2.5 kpm).
- 7 Attach gas pressure spring to back door and secure.
- 8 Install paneling on roof frame (68–447).

